10824 manual UK.book Seite 3 Freitag, 11. November 2005 3:38 15

TABLE OF CONTENTS

Safety instructions 4
Areas of use 4
Setting up and electrical connection 5
Initial operation and use 6
Faults 7
About microwaves 9
Cooking and heating up in the microwave 10

Before first use 13
The meaning of the display symbols 13
Mounting the glass dish 14
Mounting the grill stand 14
Heat appliance while empty 15

OPERATION 17
Setting clock time 17
Microwave/Grill Combi Operation 17
Hot Air/Hot Air Combi Operation 19
Using the defrost function 21
Cooking in two stages 21
Using the automatic programmes 22
Timer Function 23
Hints for cooking with autoprogrammes 24

Cleaning, disposa 25
Cleaning 25
Disposal 25

Additional functions 26
Child security 26
Checking settings while cooking 26

Troubleshooting 28

Technical data 29

SAFETY INSTRUCTIONS

Please read these operating instructions thoroughly and follow them and the safety notes in particular before using the appliance for the first time!

Anything done to or with this appliance should only be undertaken as described in the operating instructions.

Keep these instructions in a safe place for further use. If you pass on this microwave to a third party, please include these instructions.

Areas of use

- This appliance is intended solely for household use. It should only be used for warming up appropriate foodstuffs in microwave-suitable containers and dishes.
- When warming up meals in plastic or paper containers it is necessary to monitor the appliance constantly because of the danger of fire.
- The microwave is not intended for the preparation of foods which require frying. The appliance is also not intended for drying out objects. Caution! This could cause a fire!
- Children should only use this appliance without adult supervision if they have been given sufficient instructions to use the appliance safely and are aware of the dangers of misuse.

10824 manual UK.book Seite 5 Freitag, 11. November 2005 3:38 15

Setting up and electrical connection

- Connect the microwave only with an appropriate 230V~50Hz safety plug which has at least a 16 Amp fuse. To prevent tripping, please avoid using an extension cable.
- Ensure that the power cable is undamaged and does not run underneath the appliance or over any hot surfaces.
- The microwave should be set up on a level, stable surface, which is able to carry the weight of the appliance as well as the food which is to be prepared within it. Only set up the microwave in a safe, dry environment.
- Please pay attention to the minimum safe distances and under no circumstances cover the ventilation slots. Do not place any objects on the microwave as these may become hot during use. To ensure adequate ventilation a minimum safe clearance distance of 30cm and 10cm on both sides must be observed. The openings in the appliance should not be covered or blocked.

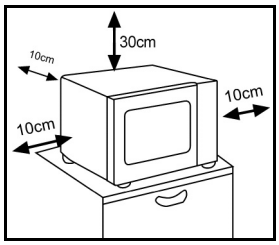

- Protect the device from water droplets or spray. If the appliance does become wet then pull out the plug immediately.

Warning!

During use the touchable surfaces may become very hot!

Attention!
Hot surface!

10824 manual UK.book Seite 6 Freitag, 11. November 2005 3:38 15

SAFETY INSTRUCTIONS

Initial operation and use

- Use only the supplied accessories or those approved by us (see “Microwave-suitable materials and objects” on page 10.).
- Never operate the appliance while empty.
- Use only microwave-suitable dishes. Look for markings such as "Microwave-suitable" or "For the microwave".
- Never use dishes with metal trimmings, metal utensils or the grill stand in microwave mode as this could damage the appliance.
- Do not remove any of the microwave's panels or the inner coating of the viewing window as this could lead to microwave radiation leakage.
- Never leave the appliance unattended during operation.
- The appliance should be cleaned regularly and food particles should be removed.
- Poor appliance hygiene can lead to damage of the surfaces, which in turn can reduce the lifespan of the appliance and even lead to dangerous situations.

Attention!

When heating liquids in the microwave so-called "delayed boiling" can occur, i.e. the liquid has reached boiling temperature without beginning to bubble as boiling liquids normally do. Agitation, for instance when removing the liquid from the appliance, can lead to a sudden boiling up of the liquid.

Warning!

There is a danger of scalding!
Therefore: always place a glass or ceramic rod in liquids that are to be heated up. This will hinder sudden, belated boiling of the liquid.

- Never heat up foods in closed containers. With bottles, such as baby bottles, always remove the lid; otherwise there is a danger of explosion.

10824 manual UK.book Seite 7 Freitag, 11. November 2005 3:38 15

- With foods that have a firm skin, e.g. sausages or tomatoes, make small slits in the skin so that they do not burst during cooking.
- Do not try to warm up eggs in their shells or pre-boiled eggs unless in specially designed microwave-suitable containers.

Warning!

Eggs which are already boiled can explode, even after being removed from the oven.

- After heating, stir the food if possible to ensure even temperatures, otherwise let the food stand for a short time.
- Check the temperature before eating food cooked in the microwave. Special care must be taken with baby food. Always stir or shake the baby food before checking the temperature to avoid burns.

Faults

- Avoid damaging the appliance or the power cable.
- Always check the cable and the appliance before each use.
- If you detect any damage do not use the appliance under any circumstances. Immediately remove the mains plug from the socket.
- Ensure that defective devices are repaired, or damaged mains cables replaced, by a specialist workshop or contact your Medion Service Centre to reduce risks.

Warning!

It is dangerous for untrained persons to carry out repair or maintenance work which requires the removal of the plates which are in place to prevent the escape of microwave radiation.

- If you see smoke, keep the door closed to prevent fire from breaking out, or to smother flames which have already broken out, and immediately turn off the appliance using the **Cancel/Stop** button.
- Then pull the plug out of the mains socket straight away.

SAFETY INSTRUCTIONS

Warning!

If the housing, door, door seal or the door catch is damaged then do not use the appliance under any circumstances. Have the appliance repaired immediately by a specialist workshop or contact your Medion Service Centre.

- Ensure that the microwave is not placed near any heat source or in an area where it could come into contact with water.

10824 manual UK.book Seite 9 Freitag, 11. November 2005 3:38 15

About microwaves

Microwaves are high-frequency electromagnetic waves which have a warming effect on the food within the oven. Microwaves heat all non-metallic objects. Therefore, do not place any metallic objects in the microwave oven. This heating effect works better the higher the water content of the foodstuff. To ensure optimal distribution of heat let food stand for a minute or two after cooking.

The effect of microwaves on foodstuffs

- Microwaves penetrate foodstuffs to a depth of up to 3cm.
- They heat up water, fat and sugar molecules (foodstuffs with a higher water content are heated more intensively).
- This heat then works its way – slowly – throughout the food and has a defrosting, heating and cooking effect on the food.
- The cooking chamber and the air within are not heated (the food container is heated mainly by the hot food).
- Each foodstuff requires a certain amount of energy to cook or defrost. As a rule of thumb we can say high energy = short time or low energy = long time.

The Microwave Oven

- A microwave generator, the so-called magnetron, generates the microwaves and directs them into the cooking space.
- The inner walls reflect the microwaves inwards so that they cannot escape from the interior.
- The rotary plate helps ensure even distribution of the microwaves onto the food.
- The microwave power can be set in several steps; the cooking/defrosting time is continuously variable.

10824 manual UK.book Seite 10 Freitag, 11. November 2005 3:38 15

- After the cooking time has elapsed, or when the door is opened, the magnetron turns off immediately.

Cooking and heating up in the microwave

- To arrange food so that it cooks properly place the food with the largest pieces towards the outer edge.
- Note the exact cooking or heating times.
- Choose the shortest available cooking or heating time and extend it if necessary. Overcooked food can start to smoke or even catch fire.
- Cover food during cooking or heating. Covering the food helps avoid splashes; furthermore the food is more evenly cooked.
- Foods such as chicken pieces or hamburgers should be turned once during cooking to speed up cooking. Larger pieces such as joints or roasting chickens must be turn at least once.
- It is also important to reposition food, e.g. with meatballs. After half of the cooking time is over the food should be repositioned from top to bottom and from the middle to the outside.

Microwave-suitable materials and objects

You can buy special dishes and accessories for your microwave. Look for markings such as "Microwave-suitable" or "For the microwave". You can also use your existing dishes – if the material is suitable.

Suitable products include:

- Porcelain, glass ceramic and heat-proof glass
- Plastics which are heat-proof and microwave-suitable (note: plastics may become discoloured by foods or become warped by the heat)
- Baking paper and foil

10824 manual UK.book Seite 11 Freitag, 11. November 2005 3:38 15

Note:

Do not use porcelain, ceramic or plastic containers in grill or grill combi mode. Cling film should also not be used. Due to the very high temperatures the materials could break, warp or even melt.

Suitable in most cases are:

- Stoneware and ceramics. Use clay containers only for defrosting and for short cooking times because the air and water content of the material could cause the clay to crack or break.
- Dishes with gold or silver décor should only be used when the manufacture has labelled it "microwave-suitable".
- Aluminium foil, if used in small pieces to protect delicate parts, in order to prevent overcooking in the corners in which the microwave energy is mainly concentrated. However, do not use too much aluminium foil and ensure that it does not come within 2.5cm of the inner walls.
- Aluminium containers (e. g. those for ready-to-serve meals) are suitable, but they must be at least 3cm high to be used in the microwave.

Unsuitable products include:

- Metal, i.e. metal pots, pans and lids.

Attention!

Metal in the cooking space can lead to sparks! These can damage the appliance or the viewing window! Therefore use the supplied grill only in grill or combi mode.

- Dishes with metal parts (handles, decoration or bottoms) or with gold or silver décor can also lead to sparks.
- Crystal or lead crystal can shatter, coloured glass may become discoloured.
- Any materials which are not heat-proof can lose shape or even burn.

SAFETY INSTRUCTIONS

Note:

To test whether a dish is suitable for use in the microwave, put some water in the container and place it in the microwave. Press the button **Micro/Micro+Grill** *and choose the highest power setting (100) using the dial. Start the microwave with the* **Start/OK** *button for one minute. If you ascertain that the container is hotter than the food, then it is not suitable for the microwave. Microwave-suitable dishes are only warmed by the heat of the food.*

Attention!

As soon as you notice sparks, flashes or even fire, then turn off the microwave immediately using the **Cancel/Stop** *button!*

Size and shape of microwave-suitable containers

Flat, broad containers are better than narrow, tall ones. "Flat" foods can be cooked more evenly.

Round or oval containers are better than angular ones. There is a danger of local overheating in the corners.

The following list is a general guide to help you choose the correct cooking dishes:

Cooking dishes for combi cooking	In the microwave	Combi mode	Grilling
Heatproof glass	Yes	Yes	Yes
Non-heatproof glass	No	No	No
Heatproof ceramic	Yes	Yes	Yes
Microwave-suitable plastic dishes	Yes	No	No
Kitchen paper	Yes	No	No
Metal	No	No	Yes
Metal grill	No	No	Yes
Aluminium foil and foil containers	No	No	Yes

BEFORE FIRST USE

- Completely unpack the appliance and accessories and check that all the parts are present before throwing away the packaging. An overview of all the parts can be found on the cover page of these instructions.

Your microwave is wrapped in packaging to protect it against transportation damage. Packaging is raw material and can be re-used or added to the recycling system.

The meaning of the display symbols

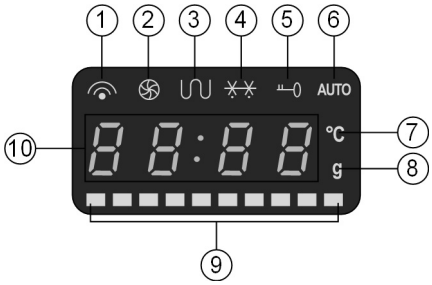

1. Microwave operation (flashes during all microwave operations)
2. Hot air operation (flashes during all hot air operations)
3. Grill operation (flashes during grill operation)
4. Defrosting (flashes during defrosting operation)
5. Child protection (lights up when child protection is activated)
6. Automatic programme (lights up during an automatic programme)
7. Temperature control (during hot air operation)
8. Weight entry field (lights up when entering weight)
9. Temperature read out (during hot air operation shows the progress of the heating up process from 140°C to 230°C in steps of 10°)
10. Number display

Note:

Please note that several symbols may be displayed at the same time!

10824 manual UK.book Seite 14 Freitag, 11. November 2005 3:38 15

BEFORE FIRST USE

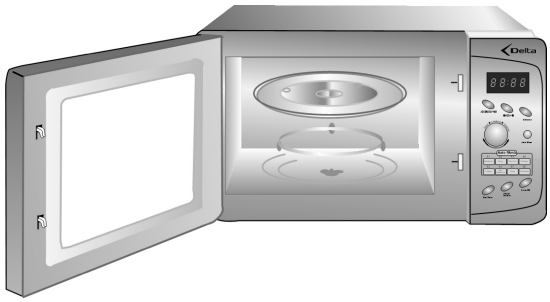

Mounting the glass dish

• Place the roller ring into the middle of the cooking space.

• Place the glass dish onto the roller ring and position it so that it clicks into the drive axis.

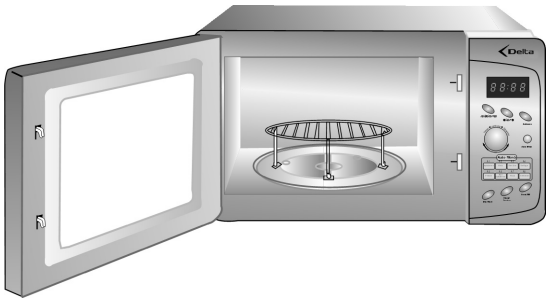

Mounting the grill stand

• For grilling or hot air operation place the grill stand with the grill upwards in the middle of the glass dish.

Attention!

Do not place the grill stand into the cooking space during microwave operation!

- Set up the microwave as described in the section “Setting up and electrical connection” on page 5.
- Ensure that the microwave is not placed near any heat source or in an area where it could come into contact with water.
- Do not place any objects (vases, covers etc.) onto the appliance.
- Check that all the accessories are present before throwing away the packaging.

10824 manual UK.book Seite 15 Freitag, 11. November 2005 3:38 15

- Before you use your new microwave with grill and hot air for the first time, please clean the appliance and all accessories to remove any possible production residues.
- Remove the protective foil from the appliance and the control panel.
- Clean all accessories in hot water with a mild detergent and dry them off.
- Clean the appliance carefully inside and out with a damp cloth and then dry it off.

Heat appliance while empty

Before first use, the microwave must be heated up empty one time for cleaning before using it with food.

- Turn on the appliance without any food and without accessories in hot air mode. To do this press the **Hot air/Micro+Hot air** button and turn the dial right until the display shows 230° C.
- Press the **Start/OK** button. Then turn the dial right until a cooking time of 20:00 minutes is displayed.
- Press the **Start/OK** button. During this initial heating period you may notice faint odours. These smells are not dangerous and will disappear after a short time.
- Ensure that ventilation is adequate.
- After 20 minutes the appliance turns itself off automatically. Wait until it has completely cooled down.
- Remove the plug from the socket and then clean the appliance once more inside and out with a damp cloth and then dry it off.

10824 manual UK.book Seite 16 Freitag, 11. November 2005 3:38 15

BEFORE FIRST USE

Attention!

Do not remove the protective foil on the inside of the door or the card on the right of the cooking space otherwise microwaves could escape!

Check the microwave for any damage – e.g. if the door is crooked or bent, door seals and other seals are damaged, hinges and the closing mechanism are defective or loose, or if the interior of the appliance or the door are dented or damaged. If you discover any damage, do not use the microwave. In this case please contact our customer service.

Attention!

In case of any kind of damage the appliance should not be connected to the mains. Have the appliance repaired immediately by a specialist workshop or contact the service hotline.

- Plug the appliance in to an appropriate safety socket (230 V ~ 50 Hz).
- Do not place the microwave near to any heat sources, in a location prone to wetness or high humidity, or in the immediate vicinity of inflammable materials.
- The feet must not be removed.
- Do not use the microwave without properly installing the rotating glass dish, the roller ring and the shaft.

OPERATION

Every time a button is pressed you will hear a beep.

Setting clock time

As soon as the microwave is connected to the power the display shows *0:00*. To set the clock proceed as follows:

- Press the **Clock/Timer.** button. The numbers for the hours display will flash in the display.
- Use the dial to set the hours.
- Press the **Clock/Timer** button to confirm the entry for the hours. The numbers for the minutes display will flash in the display.
- Use the dial to set the minutes.
- Press the **Clock/Timer** button to confirm your entry.

Note

If you press the **Cancel/Stop** *button while setting the clock or press no button at all for over a minute the display will revert to its previous position.*

Microwave/Grill Combi Operation

After pressing the **Micro/Micro+Grill** button you must choose the appropriate settings for both types of operation.

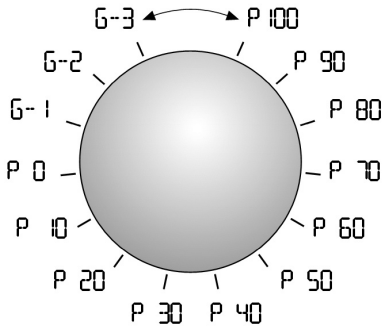

OPERATION

Microwave

- Press the **Micro/Micro+Grill** button. The display P100 will appear as well as the symbol for microwave operation.
- Use the dial to choose a performance setting from 10% to 100% and press the **Start/OK** button to confirm.
- Use the dial to set a cooking time of up to 95 minutes.
- Press the **Start/OK** button to start cooking. The symbol flashes during the operation.

The following table shows the relation between the performance in percent and in watt:.

PERFORMANCE										
PERC. (%)	10	20	30	40	50	60	70	80	90	100
WATT	85	170	255	340	425	510	595	680	765	850

Microwave/Grill Operation

- Press the **Micro/Micro+Grill** button.
- Use the dial to choose one of the grill settings G-1 to G-3 and press the **Start/OK** button to confirm.
- Use the dial to set a cooking time of up to 95 minutes.
- Press the **Start/OK** button to start cooking. The symbol flashes during the operation.

An overview of the characteristics of the three grill levels

Grill level/ Display	Performance
G - 1	100% Grill
G - 2	36% Microwave/64% Grill
G - 3	55% Microwave/45% Grill

10824 manual UK.book Seite 19 Freitag, 11. November 2005 3:38 15

Note:

To check whether you have set the grill programme. During grilling only the heating element and the ventilator are in operation. When the cooking time reaches the half-way stage you will hear two beeps to remind you to turn over the food. If, after a minute, no entry has been made the cooking process will resume.

Hot Air/Hot Air Combi Operation

As in the last section, after pressing the **Hot air/Micro+Hot air** button you must choose the appropriate settings for both types of operation.

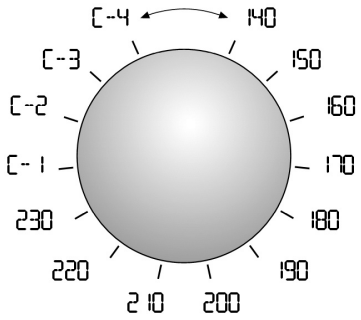

Hot Air Operation

In the hot air operation, the row of squares at the bottom of the diplays indicates the temperature which is currently reached:

- The first square lit up permanently: 140 °C;
- the first two sqares lit up permanently: 150 °C;
- the first three sqares lit up permanently: 160 °C, etc.

As long as a square flashes, the temperature is not reached yet.



Reached temperature: 200 °C

10824 manual UK.book Seite 20 Freitag, 11. November 2005 3:38 15

OPERATION

HOT AIR OPERATION WITH PRE-HEATING

- Press the **Hot air/Micro+Hot air** button.
- Use the dial to choose a temperature from 140 °C to 230 °C and press the **Start/OK** button to confirm.
- Press the **Start/OK** button again to start pre-heating. The ⍟ symbol flashes during the operation.
- When the selected temperature is reached 5 beeps will be heard.
- Open the door and place the food in the oven.
- Use the dial to set the cooking time and press the **Start/OK** button to confirm. The ⍟ symbol flashes during the cooking time.

When the temperature is reached, the microwave oven will keep this temperature for 5 minutes. If the cooking process is not started during these 5 minutes, the oven switches off automatically and the display will show the time again.

HOT AIR OPERATION WITHOUT PRE-HEATING

- Place the food in the oven.
- Press the **Hot air/Micro+Hot air** button.
- Use the dial to choose a temperature from 140 °C to 230 °C and press the **Start/OK** button to confirm.
- Use the dial to set a cooking time of up to 95 minutes.
- Press the **Start/OK** button to start cooking. The ⍟ symbol flashes during the operation.

Hot Air Combi Operation

- Press the **Hot air/Micro+Hot air** button.
- Use the dial to choose one of the hot air settings C1 to C4 and press the **Start/OK** button to confirm.
- Use the dial to set a cooking time of up to 95 minutes.

10824 manual UK.book Seite 21 Freitag, 11. November 2005 3:38 15

- Press the **Start/OK** button to start cooking. During this operation the ⍟ symbol and the microwave symbol ⦾ will flash in the display.

In order to reach the set hot air temperature in the minimum time, the hot air function will be supported by the grill function. Therefore, the display will show the ⍝ symbol for the grill as well as the ⍟ symbol for the hot air during the cooking process.

An overview of the characteristics of the four hot air levels:

Hot Air Level/ Display	Performance
C - 1	60 % Microwave / 40 % Hot Air
C - 2	51 % Microwave / 49 % Hot Air
C - 3	40 % Microwave / 60 % Hot Air
C - 4	27 % Microwave / 73 % Hot Air

Using the defrost function

- Press the **Defrost** button. The display now shows DEF 1.
- Turn the dial to enter the weight of the food to be defrosted. The symbols **g**, ✻✻, AUTO and ⦾ will appear in the display.
- Press the **Start/OK** button to start defrosting. The symbol ⦾ will flash in the display, this means that the defrosting process has begun.

Cooking in two stages

To make cooking more convenient you can also programme two cooking programmes to run one after the other.

- To do this, choose one function (e. g. microwave) and confirm your entries as described previously. However, do not press the **Start/OK** button to start cooking.
- Now set another function (e. g. hot air) and confirm your entries.
- Press the **Start/OK** button to start cooking. The two stages will take place one after the other.

OPERATION

Note:

The defrost function can only be set as stage number one.

The "Cooking in two stages" function is not available for automatic programmes.

Using the automatic programmes

- Press the **Auto Menu** key.
- Use the dial to select one of the automatic programmes "A1-A8".
- Press the **Start/OK** button to confirm the chosen auto-programme.
- Turn the dial to enter the weight of the food to be cooked for programmes "A1-A7" or the portions for the programme "A8".
- Press the **Start/OK** button to start the automatic programme.

Table of the weight-dependent automatic programmes

Auto-programme	A1	A2	A3	A4
Setting on dial	Reheat	Rice	Vegetables	Chicken
1	140 g	50 g	100 g	400 g
2	210 g	100 g	200 g	600 g
3	280 g	150 g	300 g	800 g
4	350 g	200 g	400 g	1 kg
5	470 g	250 g	500 g	1.2 kg
6	500 g		600 g	1.5 kg

10824 manual UK.book Seite 23 Freitag, 11. November 2005 3:38 15

Auto-programme	A5	A6	A7	A8
Setting on dial	Meat	Reheat Bread	Pizza	Porridge
1	100 g	50 g	300 g	1 portion
2	200 g	100 g	400 g	2 portions
3	300 g	150 g		
4	400 g	200 g		
5	500 g			
6	750 g			

Timer Function

For any of the functions available, you can use the timer function to set a time for the microwave oven to start cooking.

- Choose one of the functions microwave, grill or hot air, as described previously. The button **Defrost** is not available for this setting.
- After setting the functions press the **Clock/Timer** button. The hour display will start to flash.
- Use the dial to set the hours for the timer.
- Press the **Clock/Timer** button to confirm the entry for the hours. The numbers for the minutes display will flash in the display.
- Use the dial to set the minutes for the timer.
- Press the **Start/OK** button. The appliance will now start with the programmed function at the time entered.

10824 manual UK.book Seite 24 Freitag, 11. November 2005 3:38 15

Hints for cooking with autoprogrammes

In general, if you cook packed food, always follow the microwave description on the packet.

Cooking rice

The following table shows the amount of water needed for a given quantity of rice. Please mind that the amount of water needed might change with different sorts of rice.

Rice	50 g	100 g	150 g	200 g	250 g
Water	130 g	270 g	300 g	380 g	450 g

Cooking vegetables

For fresh vegetables, the amount of water should be the same as you would use when cooking on an oven.

For deep frozen vegetables, it is mostly sufficient to add some spoonfuls of water. Please mind the instruction on the packet.

It is suggested to cover the food with an appropriate, microwave-proof, lid!

Cooking porridge

Your microwave oven offers a special programme for cooking fresh porridge.

Prepare the fresh ingredients for one or two portions as usual. Place the dish in the microwave oven and select autoprogramme A8. The microwave oven will cook the porridge and then reduce the power to let the porridge swell.

10824 manual UK.book Seite 25 Freitag, 11. November 2005 3:38 15

CLEANING, DISPOSAL

Cleaning

The microwave should be cleaned regularly and food particles should be removed. Poor appliance hygiene can lead to damage to the surfaces, which in turn can reduce the lifespan of the appliance and even lead to dangerous situations.

- Before cleaning, always remove the mains plug from the socket!
- Never let the appliance itself come into contact with liquid and never dip the appliance into water.

Warning!

There is a risk of electric shock.

- Allow the appliance to cool down completely.
- Wash the grill stand and the dish in a mild detergent solution or in the dishwasher.
- Wipe out in the interior if necessary with a damp cloth.
- Parts of the door, the viewing window, and especially the seal and the closing mechanism should be cleaned carefully with a mild detergent solution. Pay great care to avoid damaging these parts.
- If necessary you can also wipe the housing with a damp cloth.
- Allow the microwave to dry off with the door open. Always wait until the microwave is completely dry. Only then should you reconnect the appliance to the power.

Disposal

At the end of its life, the microwave should not be disposed of with the household rubbish. Seek the advice of your local authority on correct, environmentally-friendly disposal.

10824 manual UK.book Seite 26 Freitag, 11. November 2005 3:38 15

ADDITIONAL FUNCTIONS

Child security

Block buttons:

- Press the **Cancel/Stop** button for about 3 seconds. You will hear a beep and the display will show the symbol ⊣●. The microwave's buttons are now blocked.

Remove block:

- Press the **Cancel/Stop** button for about 3 seconds. You will hear a beep and the ⊣● symbol will go out. The buttons are now released.

Checking settings while cooking

While you are cooking you can check the settings you have chosen. To do this, press the appropriate operation button. The current temperature or mode will appear in the display. After around 3 seconds the display will return to its previous display.

Microwave operation

Press the **Micro/Micro+Grill** button.

Hot air operation

Press the **Hot air/Micro+Hot air** button.

Microwave/Grill Combination

Press the **Micro/Micro+Grill** button.

Microwave/Hot air

Press the **Hot air/Micro+Hot air** button.

Automatic function

Press the **Auto Menu** key.

10824 manual UK.book Seite 27 Freitag, 11. November 2005 3:38 15

Special features/Notes

The maximum cooking time is 95 minutes for microwave, grill, hot air, microwave/grill and microwave/hot air modes.

When the cooking time reaches the halfway point in grill mode there be two beeps to remind you to turn the food over. If you do not open the door or press a button within one minute the cooking restarts.

When you have turned the food over, close the door and continue cooking by pressing **Start/OK**.

You can interrupt the cooking process in each mode by pressing **Cancel/Stop** *once.*
In this mode, press **Start/OK** *to resume the cooking process.*
If you want to end the cooking altogether, press **Cancel/Stop** *twice.*

TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance will not start.	The mains plug is not properly connected.	Pull out the plug, wait 10 seconds and then plug it back in again.
	The fuse is blown or the power interrupter has tripped.	Replace the fuse or reset the power interrupter (contact our service centre to do this).
	The socket is defective.	Check the socket by plugging in another appliance.
The appliance does not warm up.	The door is not closed.	Close the door.
The rotating dish makes a loud noise when it turns.	The roller ring or the floor of the oven is dirty.	Clean the appliance. Read the section "Cleaning the appliance".

10824 manual UK.book Seite 29 Freitag, 11. November 2005 3:38 15

TECHNICAL DATA

Power supply: 230 V ~ 50 Hz
Microwave frequency: 2450 MHz
Microwave input performance: 1450 W
Microwave output performance: 850 W
Performance grill: 1400 W
Performance hot air: 1000 W
Performance heating element (total): 2400 W max.

CE

Subject to technical changes.